

# Miller Diving Equipment

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.millerdiving.com email: info@millerdiving.com

## Part #925-144 Miller Diving O-ring Kit

Part #	Description	Qty
510-008	O-ring	2
510-011	O-ring	1
510-014	O-ring	1
510-483	O-ring	1
520-033	O-ring	1
910-024	O-ring	1
910-058	O-ring	1
910-073	O-ring	1
910-101	O-ring	1
910-103	O-ring	2

\*See back of page for *O-ring Identification*

O-rings should be lightly lubricated with food grade silicone Dow Corning® 111 or equivalent. Christo-Lube® may also be used. At a minimum, all helmet O-rings should be replaced at least once a year. It is suggested you use Kirby Morgan® checklist A2.1 for the helmet being inspected. During daily and monthly maintenance, disturbed O-rings and valves may be reused providing no damage or deformation is found. O-rings and valves may require replacement more often than yearly if the helmet use is extreme, or if the helmet is used in waters containing oil or chemical contamination. Daily cleaning and inspections as well as performing the Kirby Morgan® monthly inspection A2.2 will identify the need more accurately than simply placing a number of hours between overhaul. Store spare O-rings, valves and soft goods in a cool, dark, dry place. Avoid prolonged exposure to temperatures above 90 degrees Fahrenheit and/or exposure to ultra violet rays. Do not lubricate exhaust valves. Lubricating valves can cause dirt to stick, allowing leakage.

### **⚠ CAUTION**

**Use only Miller Diving original replacement parts. The use of other manufacturers' parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by Miller Diving. When ordering spares, always insist on Miller Diving Genuine Parts.**

# Miller Diving Equipment

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.millerdiving.com email: info@millerdiving.com



## *O-ring Identification*



510-008




510-011



510-014



510-483

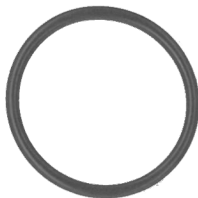

910-024



910-058



910-073



910-101



910-103